


CLUTCH CONTROL SCHEMATICS


SKYLINE SINGLE SHADE

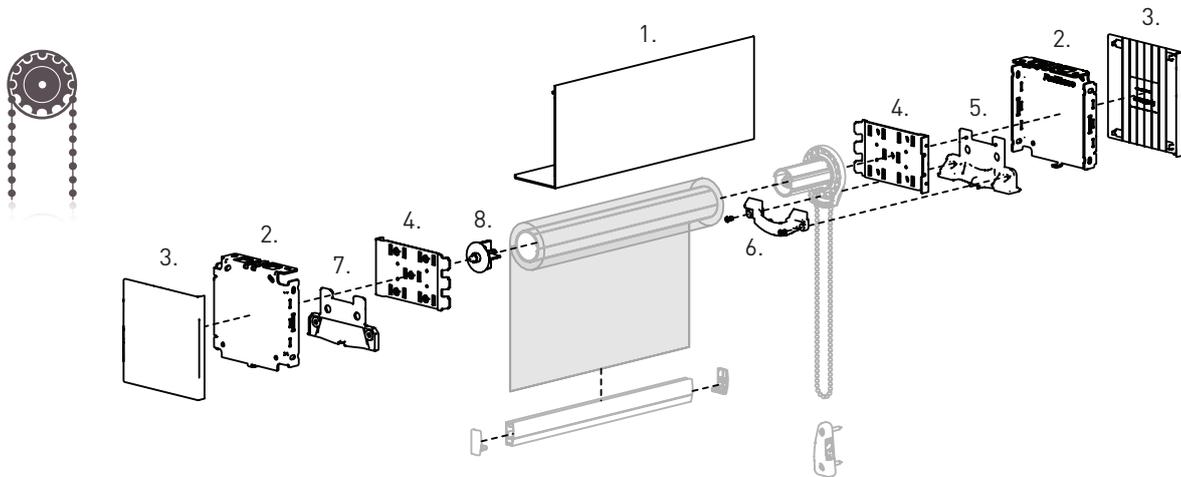

SYSTEM INDEX:

- | | |
|----------------------------|---|
| 1. 5" Fascia Panel | 6. Single Chain Guard (Not needed for SL30 or G400) |
| 2. 5" Fascia Base Bracket | 7. Pin End Guide |
| 3. 5" Fascia Bracket Cover | 8. Skyline Pin End |
| 4. Skyline Insert Pair | |
| 5. Single Diverter | |

SKYLINE DUAL SHADE

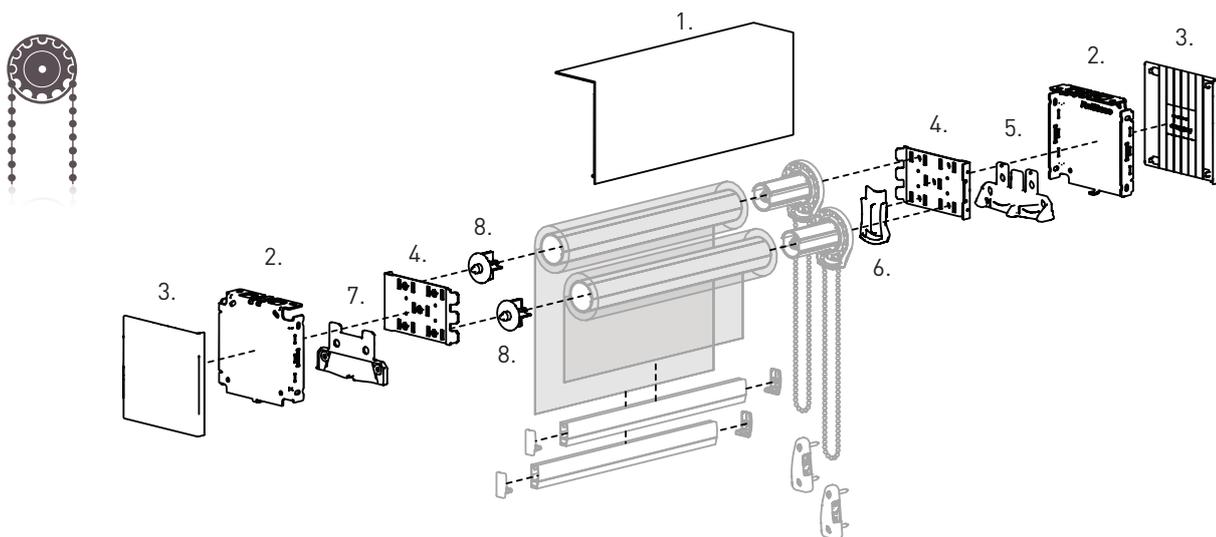


SYSTEM INDEX:

- | | |
|----------------------------|---------------------|
| 1. 5" Fascia Panel | 6. Dual Chain Guide |
| 2. 5" Fascia Base Bracket | 7. Pin End Guide |
| 3. 5" Fascia Bracket Cover | 8. Skyline Pin End |
| 4. Skyline Insert Pair | |
| 5. Dual Diverter | |

MOTORIZED CONTROL SCHEMATICS


AUTOMATE SINGLE SHADE

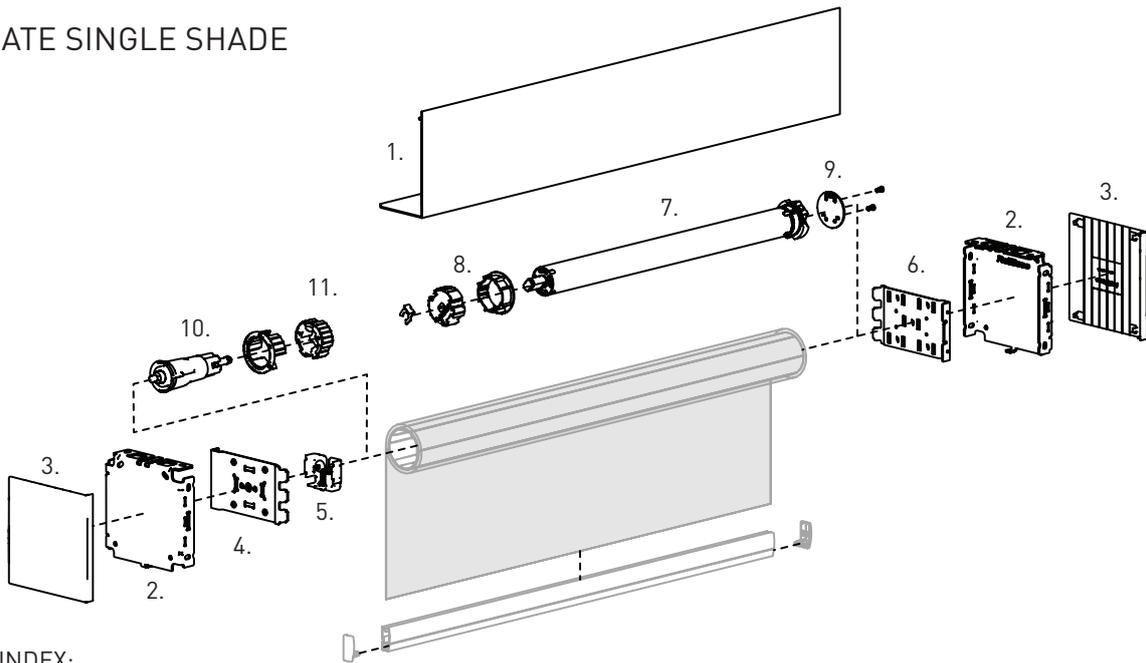

SYSTEM INDEX:

- | | |
|--|----------------------------------|
| 1. 5" Fascia Panel | 7. AUTOMATE ARC Motor |
| 2. 5" Fascia Base Bracket | 8. AUTOMATE Crown & Drive Kit |
| 3. 5" Fascia Bracket Cover | 9. AUTOMATE Adapter |
| 4. Fascia R-Series Single & Motor Idler Insert | 10. Motor Shade Idler Silent Pin |
| 5. Silent Pin Idler Yoke Kit | 11. Silent Pin Crown & Drive Kit |
| 6. Skyline Insert Plate | |

AUTOMATE DUAL SHADE

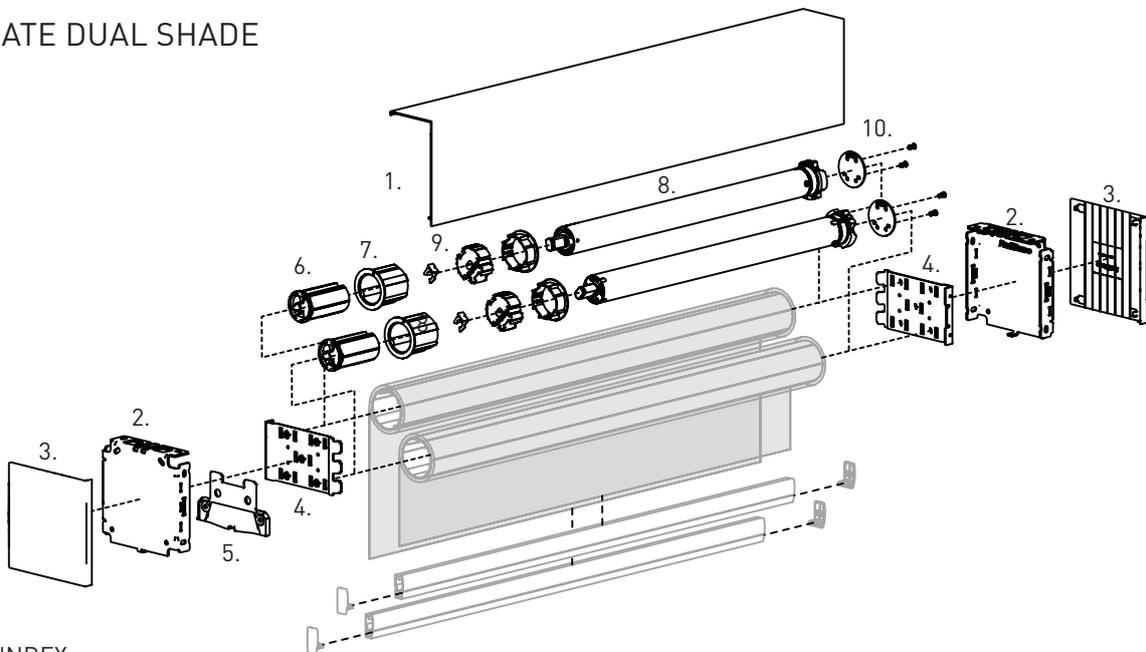


SYSTEM INDEX:

- | | |
|-------------------------------|-------------------------------|
| 1. 5" Fascia Panel | 7. Adapter |
| 2. 5" Fascia Base Bracket | 8. AUTOMATE ARC Motor |
| 3. 5" Fascia Bracket Cover | 9. AUTOMATE Crown & Drive Kit |
| 4. Skyline Insert Pair | 10. AUTOMATE Adapter |
| 5. Pin End Guide | |
| 6. Skyline Heavy Duty Pin End | |

MOTORIZED CONTROL SCHEMATICS

SOMFY SINGLE SHADE

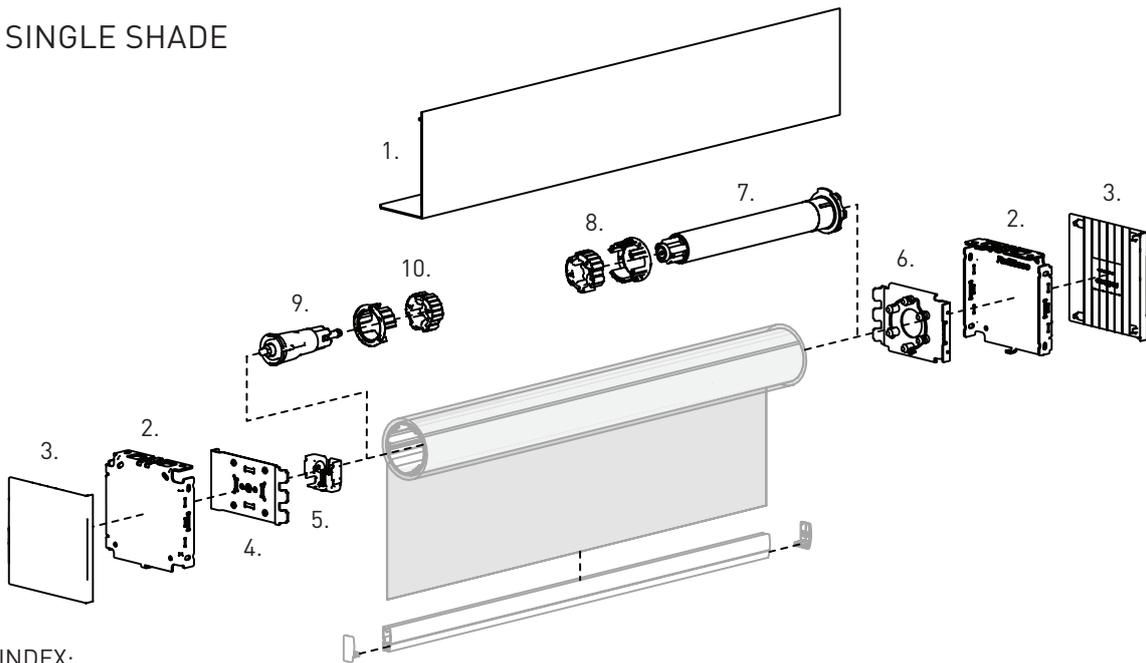

SYSTEM INDEX:


- | | |
|--|----------------------------------|
| 1. 5" Fascia Panel | 6. Fascia Motor Side Insert |
| 2. 5" Fascia Base Bracket | 7. SOMFY Motor |
| 3. 5" Fascia Bracket Cover | 8. SOMFY Crown & Drive Kit |
| 4. Fascia R-Series Single & Motor Idler Insert | 9. Motor Shade Idler Silent Pin |
| 5. Silent Pin Idler Yoke | 10. Silent Pin Crown & Drive Set |

SECTION C | ASSEMBLY & INSTALLATION

5" FASCIA - SKYLINE CLUTCH | SINGLE

Pin End Assembly


NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

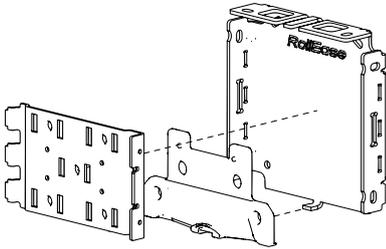

OPTIONAL:
Use a Mallet to snap the Skyline Insert Plate to the bracket


Control End Assembly

NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

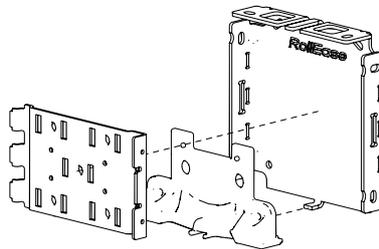


OPTIONAL:
Use a Mallet to snap the Skyline Insert Plate to the bracket


WALL MOUNT

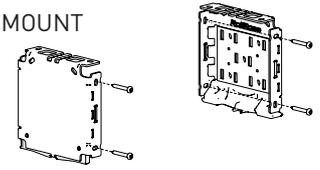


INSIDE MOUNT

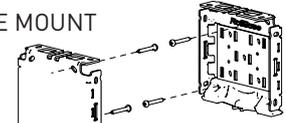


CEILING MOUNT

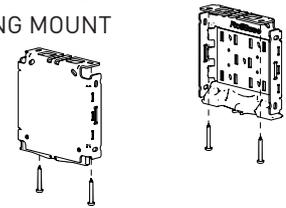

Attach Roller Assembly Pin first

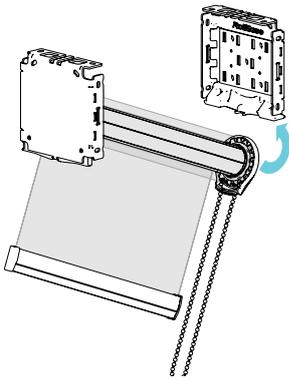


Attach Skyline Clutch to Insert Plate

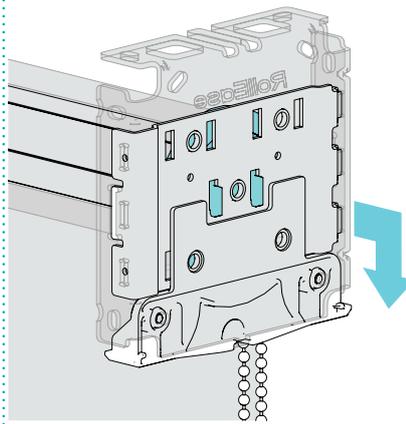


Push hooks through the Insert Plate and pull down

Align Chain with Chain Guide

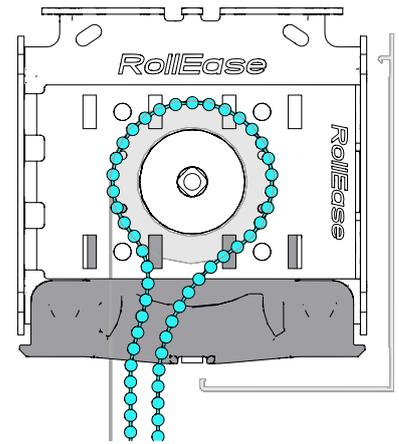


Ensure Fascia can still be attached


**Attach Chain Cover
(Not required for SL30 & G400)**

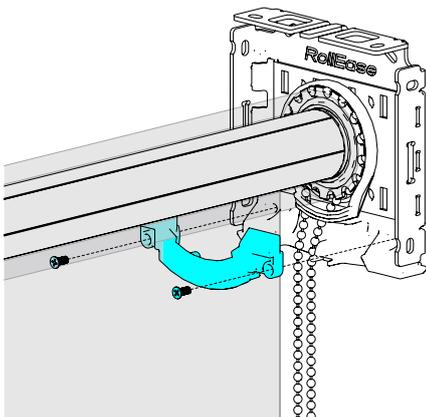

Attach Fascia Panel

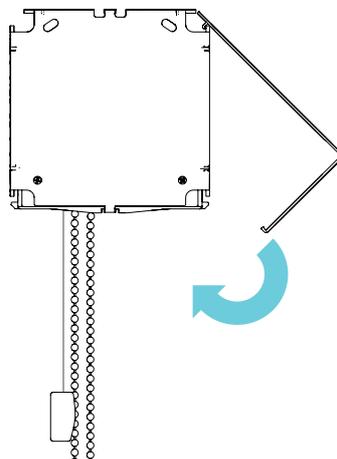


Attach Bracket Covers

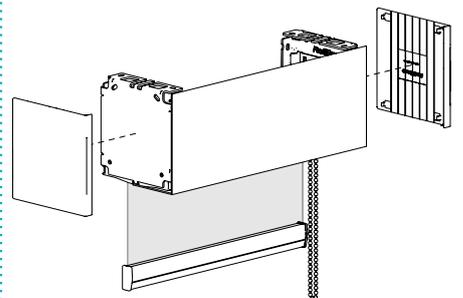

5" FASCIA - SKYLINE CLUTCH | DUAL

Pin End Assembly


NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

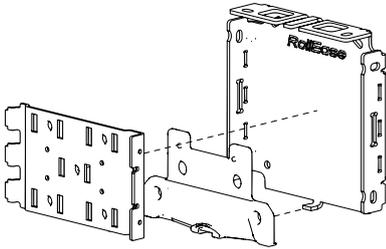

OPTIONAL:
Use a Mallet to snap the Skyline Insert Plate to the bracket


Control End Assembly

NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

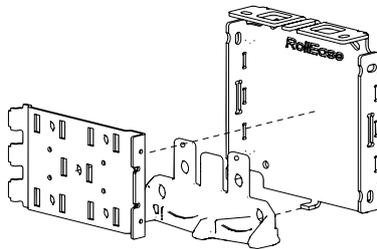


OPTIONAL:
Use a Mallet to snap the Skyline Insert Plate to the bracket


WALL MOUNT

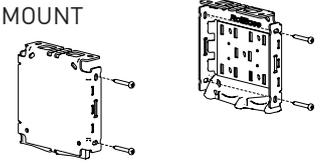

INSIDE MOUNT

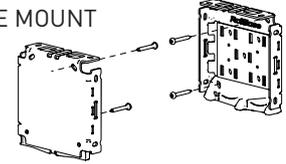


Attach Chain Diverter to bracket Assembly

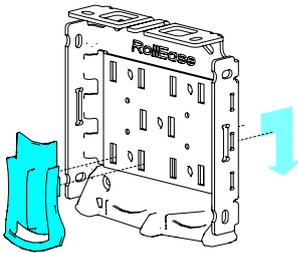


Push hooks through the bracket and pull down

Attach Top Roller Assembly Pin first

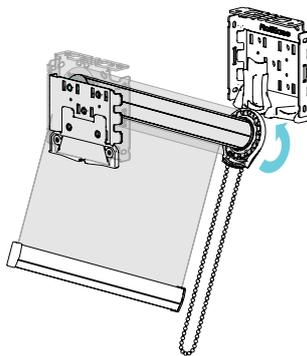


Push hooks through the bracket and pull down

Pull Chain through Chain Diverter

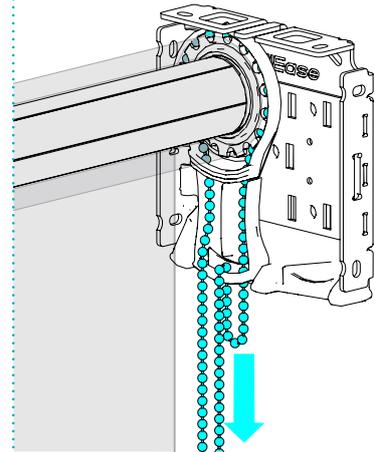


Attach Bottom Roller Assembly Pin first

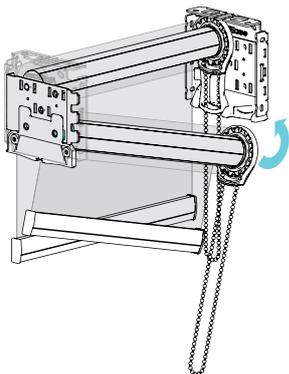


Push hooks through the bracket and pull down

Attach Fascia Panels

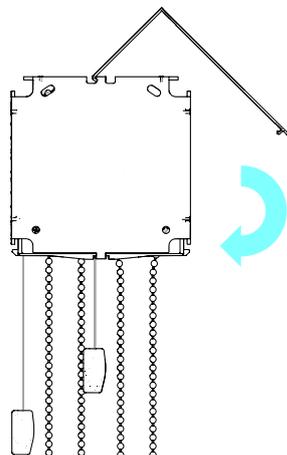


Attach Bracket Covers

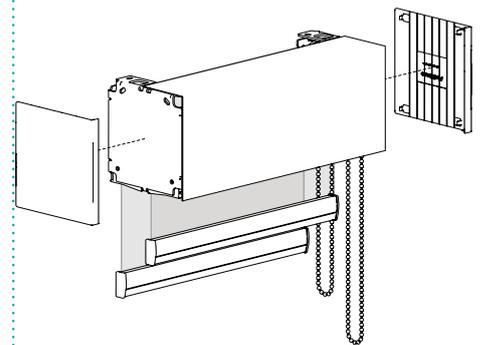

5" FASCIA - AUTOMATE MOTOR | SINGLE

Pin End Assembly


NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

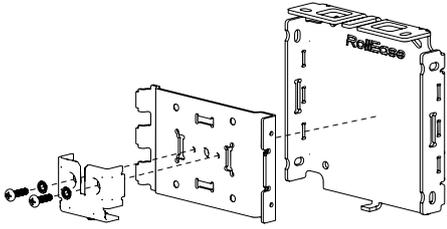

OPTIONAL:
Use a Mallet to snap the Skyline Insert Plate to the bracket


Control End Assembly

NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

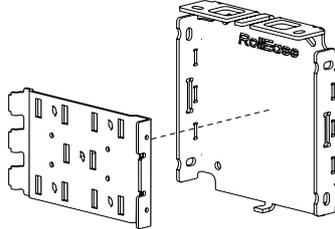


OPTIONAL:
Use a Mallet to snap the Skyline Insert Plate to the bracket


WALL MOUNT

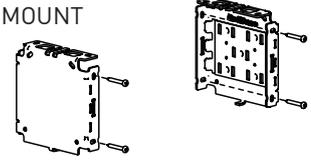


INSIDE MOUNT

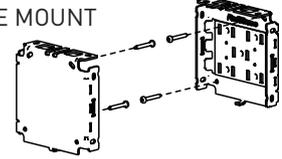


CEILING MOUNT

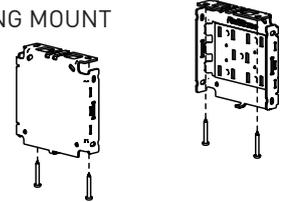

Attach Roller Assembly Pin First

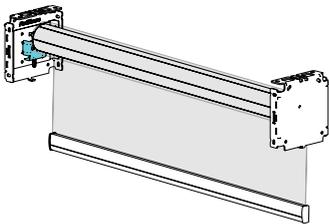


Attach Skyline Control to Bracket

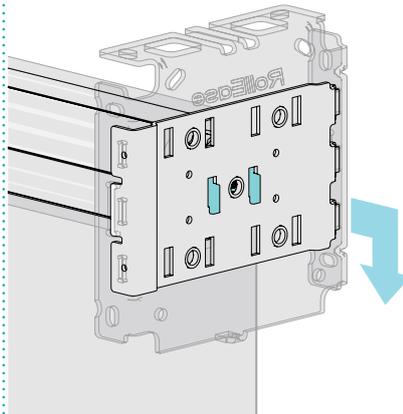


Push hooks through the bracket and pull down


Adjust Yoke screw until Shade is level

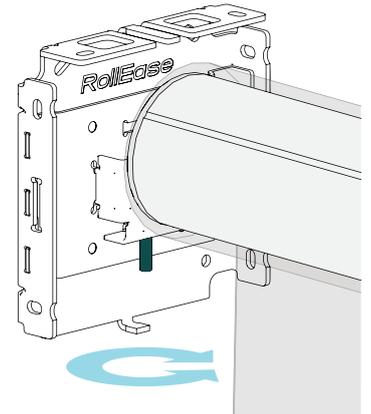

Attach Fascia Panels

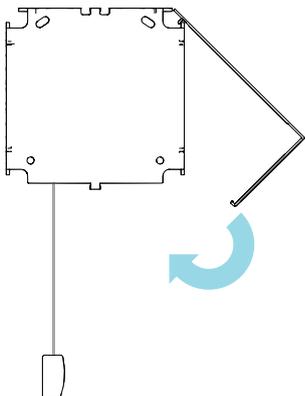


Attach Bracket Covers

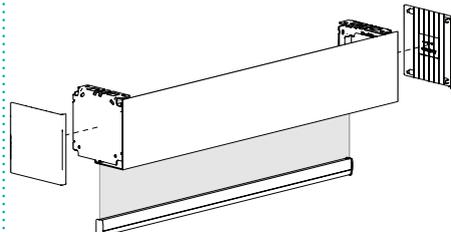

5" FASCIA - AUTOMATE MOTOR | DUAL

Pin End Assembly


NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

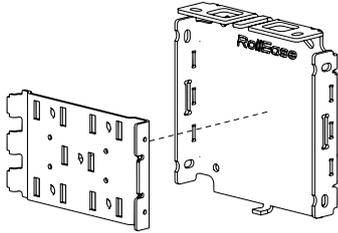

OPTIONAL:
Use a Mallet to snap the Skyline Insert Plate to the bracket


Control End Assembly

NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

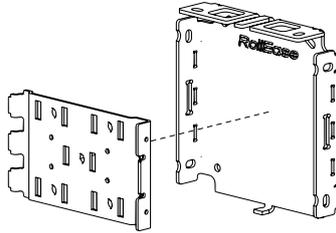


OPTIONAL:
Use a Mallet to snap the Skyline Insert Plate to the bracket


WALL MOUNT

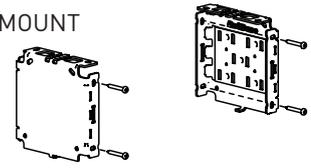


INSIDE MOUNT

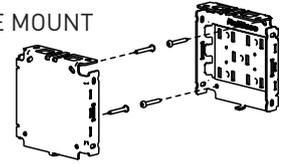

Attach Top Roller Assembly Pin first

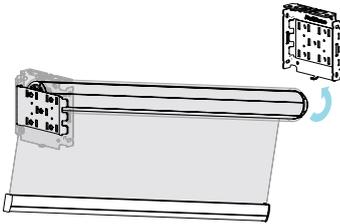


Attach Skyline Hooks in place

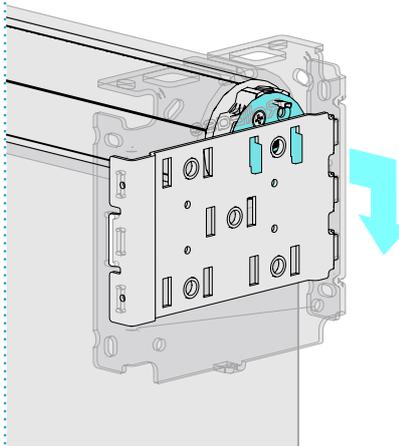


Push hooks through the bracket and pull down

Attach Bottom Roller Assembly Pin first

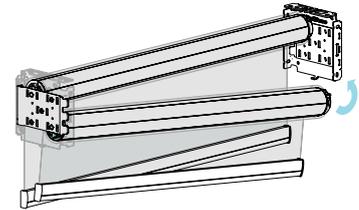


Attach Skyline Hooks in place

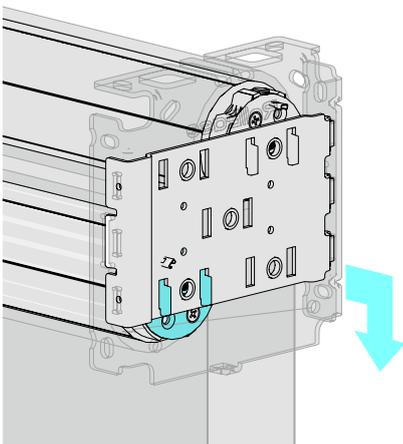

Push hooks through the bracket and pull down

Attach Fascia Panels

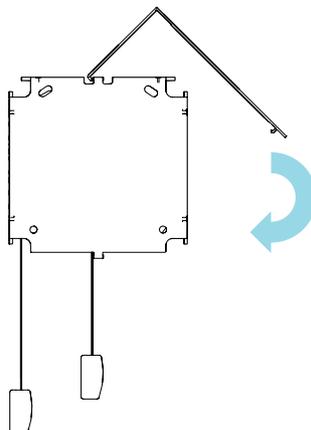

Attach Bracket Covers

